

Operating the AV System in College 3255


Powering On the System



Tap the touchscreen anywhere to turn on the system. This will lower the projector screen and power on the projector.

NOTE: The system can feel slow to react. Please wait a few moments after pressing any given button.

Source Selection

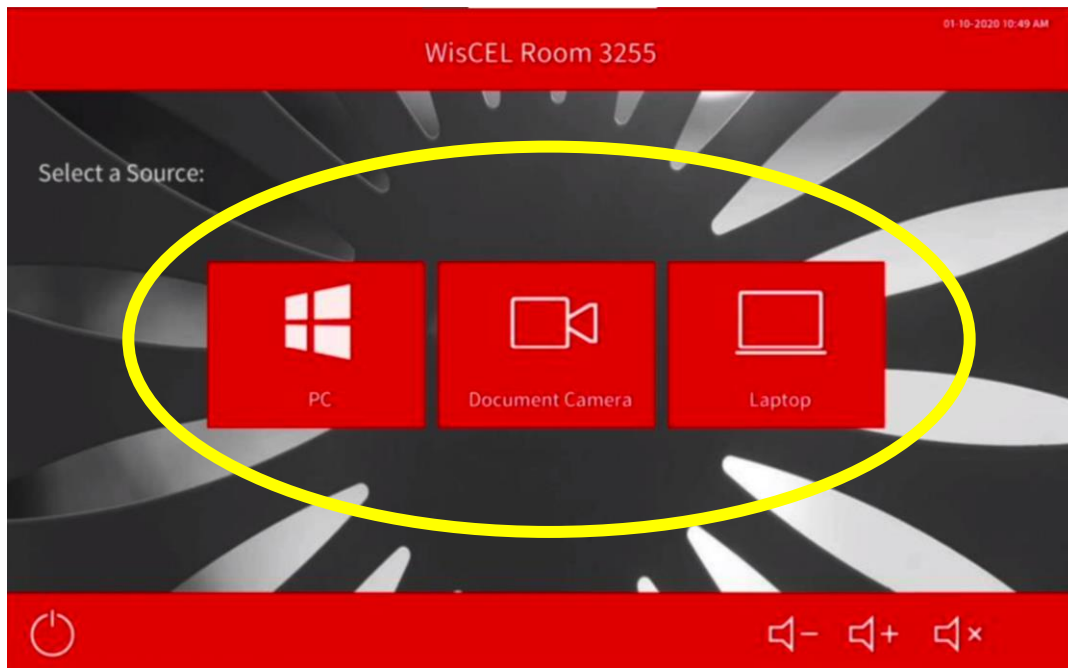

Select the source that you would like to display on the room's projector. The source options include PC, Document Camera, and Laptop.

PC can be used to share the Podium PC screen. Sign into the Podium PC using your UW NetID.

Document Camera displays what is being shown on the podium document camera. To use the document camera, first press the power button on the document camera itself.

Laptop allows you to share your personal device's screen. Connect your device using the HDMI cable at the podium and any necessary adapter. A USB-C, mini DisplayPort, and DisplayPort adapter are provided.

Source Volume




The **volume controls** can be used to adjust the volume of the current source. Keep in mind that the podium is in an audio dead zone. The volume in the classroom is louder than what you hear at the podium.

The **plus and minus icons** increase and decrease the volume.

The **speaker icon with an "x"** can be pressed to mute the source. When muted, the icon will turn amber.

TIP: If you cannot hear any audio and your source is not muted, be sure that the audio output of the device you are using is set to the **Crestron speakers**.

Power Button

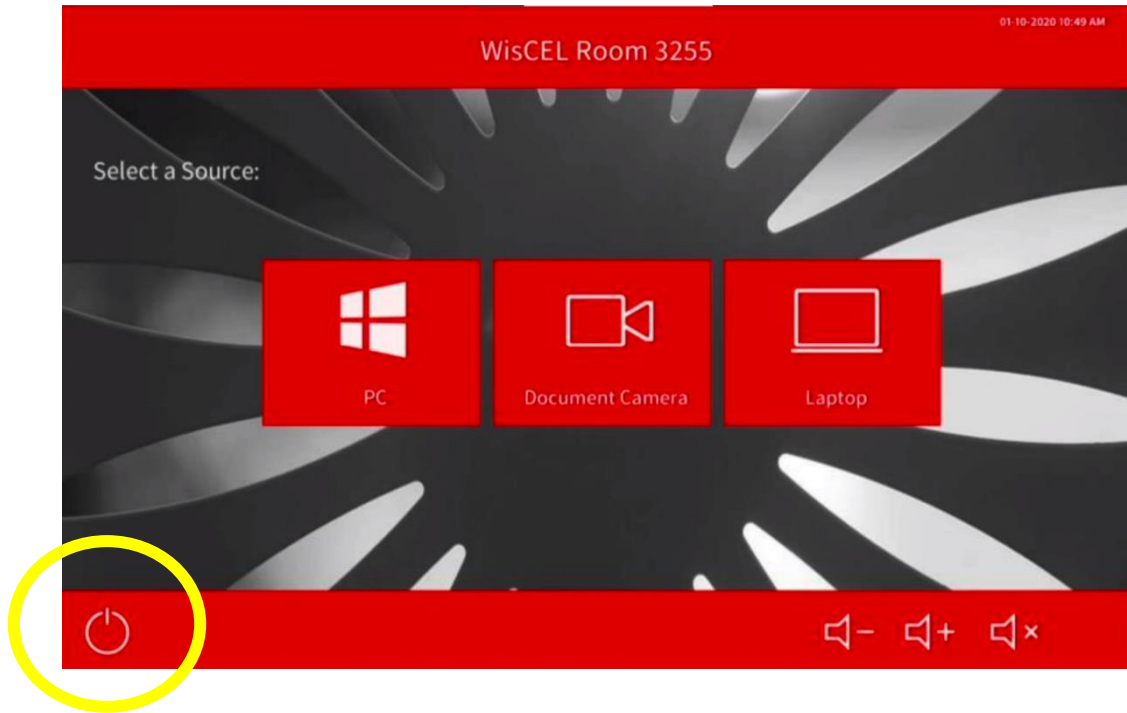

The Power button turns off the projector and raises the projector screen.

Note: The system only needs to be powered off at the end of the day.